



# Dodge Cork

HANDCRAFTED SINCE 1871

<b>CORK SIZE</b>	<b>TOP DIAMETER</b>		<b>BOTTOM DIAMETER</b>		<b>LENGTH</b>	
<b>dimensions</b>	<b>inches</b>		<b>inches</b>		<b>inches</b>	
RL 0000	0.19	3/16	0.09	3/32	0.50	1/2
RL 000	0.25	1/4	0.16	5/32	0.50	1/2
RL 00	0.31	5/16	0.22	7/32	0.50	1/2
RL 0	0.38	3/8	0.28	9/32	0.50	1/2
RL01	0.44	7/16	0.33	21/64	0.63	5/8
RL02	0.50	1/2	0.38	3/8	0.69	11/16
RL03	0.56	9/16	0.42	27/64	0.75	3/4
RL04	0.63	5/8	0.47	15/32	0.81	13/16
RL05	0.69	11/16	0.53	17/32	0.88	7/8
RL06	0.75	3/4	0.58	37/64	0.94	15/16
RL07	0.81	13/16	0.63	5/8	1	1
RL08	0.88	7/8	0.67	43/64	1.06	1 1/16
RL09	0.94	15/16	0.73	47/64	1.13	1 1/8
RL 10	1.00	1	0.77	49/64	1.25	1 1/4
RL 11	1.06	1 1/16	0.83	53/64	1.25	1 1/4
RL 12	1.13	1 1/8	0.89	57/64	1.25	1 1/4
RL 13	1.19	1 3/16	0.95	61/64	1.25	1 1/4
RL 14	1.25	1 1/4	1.02	1 1/64	1.25	1 1/4
RL 15	1.31	1 5/16	1.08	1 5/64	1.25	1 1/4
RL 16	1.38	1 3/8	1.09	1 3/32	1.50	1 1/2
RL 17	1.44	1 7/16	1.16	1 5/32	1.50	1 1/2
RL 18	1.50	1 1/2	1.22	1 7/32	1.50	1 1/2
RL 19	1.56	1 9/16	1.28	1 9/32	1.50	1 1/2
RL 20	1.63	1 5/8	1.69	1 11/16	1.50	1 1/2

#### How to size your cork:

Typically, we recommend measuring the inside diameter of the opening of the hole you wish to fill then select the cork with the largest BOTTOM diameter smaller than your inside diameter of your item. Although natural variations do exist in both size and appearance, all Dodge Cork products meet or exceed industry standards.



<b>CORK SIZE</b>	<b>TOP DIAMETER</b>		<b>BOTTOM DIAMETER</b>		<b>LENGTH</b>	
<b>dimensions</b>	<b>inches</b>		<b>inches</b>		<b>inches</b>	
RL 21	1.69	1 11/16	1.34	1 11/32	1.50	1 1/2
RL 22	1.75	1 3/4	1.47	1 15/32	1.50	1 1/2
RL 23	1.81	1 13/16	1.53	1 17/32	1.50	1 1/2
RL 24	1.88	1 7/8	1.59	1 19/32	1.50	1 1/2
RL 25	1.94	1 15/16	1.66	1 21/32	1.50	1 1/2
RL 26	2	2	1.72	1 23/32	1.50	1 1/2
RL 27	2.06	2 1/16	1.78	1 25/32	1.50	1 1/2
RL 28	2.13	2 1/8	1.84	1 27/32	1.50	1 1/2
RL 29	2.19	2 3/16	1.91	1 29/32	1.50	1 1/2
RL 30	2.25	2 1/4	1.97	1 31/32	1.50	1 1/2
RL 31	2.31	2 5/16	2.03	2 1/32	1.50	1 1/2
RL 32	2.38	2 3/8	2.09	2 3/32	1.50	1 1/2
RL 33	2.50	2 1/2	2.16	2 5/32	1.50	1 1/2
RL 34	2.50	2 1/2	2.22	2 7/32	1.50	1 1/2
RL 35	2.56	2 9/16	2.28	2 9/32	1.50	1 1/2
RL 36	2.63	2 5/8	2.34	2 11/32	1.50	1 1/2
RL 37	2.69	2 11/16	2.41	2 13/32	1.50	1 1/2
RL 38	2.75	2 3/4	2.47	2 15/32	1.50	1 1/2
RL 39	2.81	2 13/16	2.53	2 17/32	1.50	1 1/2
RL 40	2.88	2 7/8	2.59	2 19/32	1.50	1 1/2
RL 42	3.00	3	2.72	2 23/32	1.50	1 1/2
RL 44	3.13	3 1/8	2.84	2 27/32	1.50	1 1/2
RL 46	3.25	3 1/4	2.97	2 31/32	1.50	1 1/2
RL 48	3.38	3 3/8	3.09	3 3/32	1.50	1 1/2

#### How to size your cork:

Typically, we recommend measuring the inside diameter of the opening of the hole you wish to fill then select the cork with the largest **BOTTOM DIAMETER** smaller than your inside diameter of your item. Although natural variations do exist in both size and appearance, all Dodge Cork products meet or exceed industry standards.